

It's recommended to use a soft cloth or gloves when handling the fixture.


Wiring Instructions

1. Attach universal crossbar to J-box, aligning holes in regard to fireplate and fixture direction.
2. Raise fireplate to ceiling and use holes to mark drywall anchor locations. Install anchors flush with ceiling surface.
3. Screw fireplate on to universal crossbar.
4. Use drywall screws to secure the fireplate to the dry wall anchors.
5. With the help of another person, lift the canopy and fixture up and suspend from fireplate using (4) c hooks.
6. Connect positive supply wire (typically black or the smooth, unmarked side of the two-conductor cord) to (2) positive fixture leads with appropriately sized twist on connector.
7. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to (2) negative fixture leads.
8. Please refer to the grounding instructions to complete all electrical connections.
9. With the help of another person, raise the fixture by the canopy over the fire-plate. Remove c hooks and insert side screws to secure canopy flush to the ceiling.

Grounding Instructions

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (typically copper or green plastic coated) to the fixture mounting crossbar with the ground screw.

Note: On straps for screw support fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

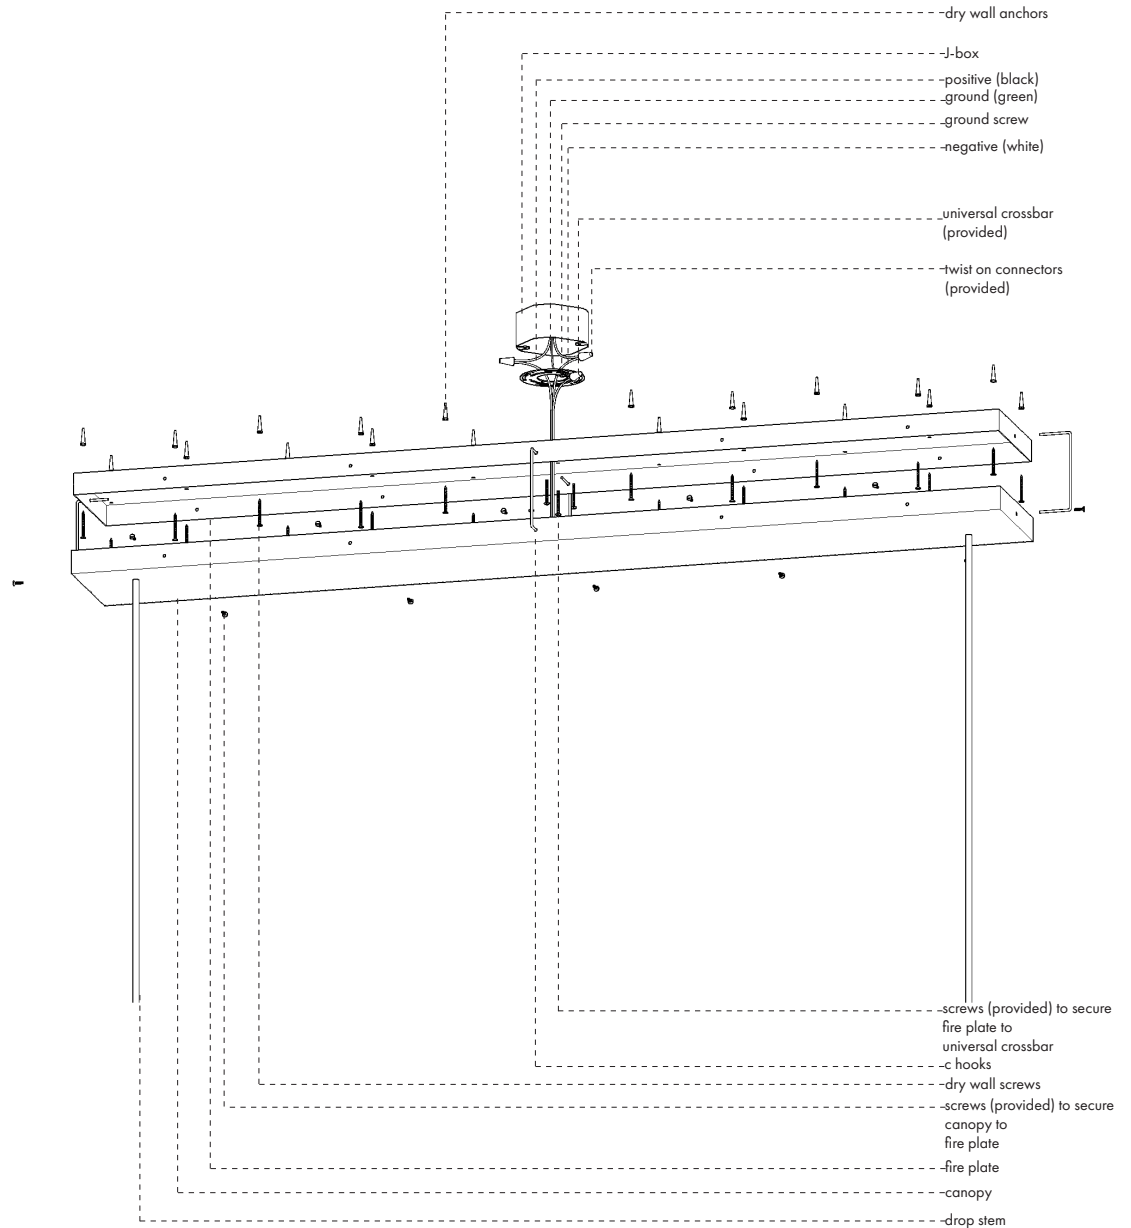

It's recommended to use a soft cloth or gloves when handling the fixture.

Assembly Instructions

1. Insert connector of frame a into hollow pipe of frame b. Secure using provided (1) set screw.
2. Secure cylinder joints at left and right using provided (8) set screws.

Light bulb Replacement

1. Gently rotate glass shade counter clockwise to remove from fixture.
2. Remove bulb by pulling from socket and replace.
3. Rotate glass shade clockwise to secure to fixture. Do not over tighten.

