


## LUNE pendant

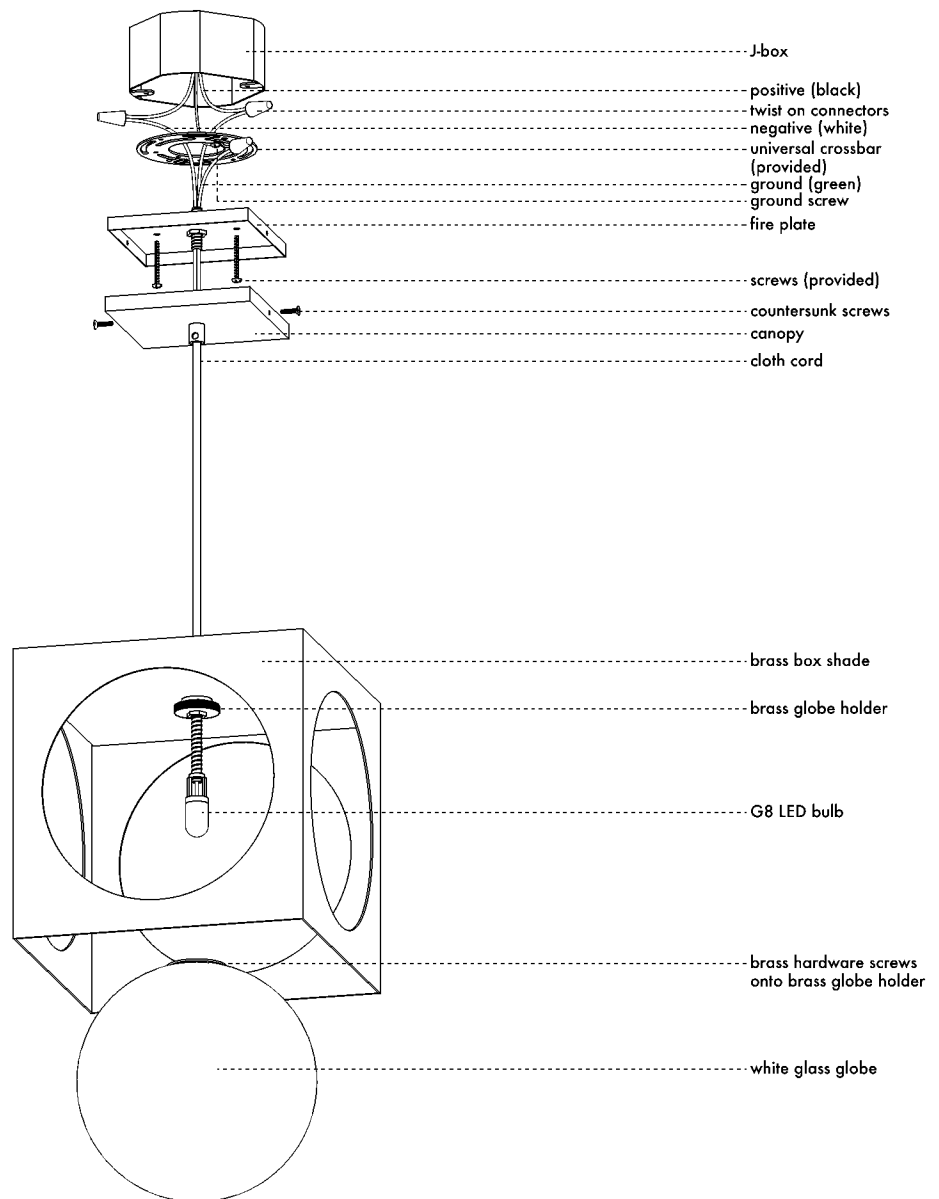

## WIRING INSTRUCTIONS

1. Attach universal crossbar to Junction box, aligning holes to desired location in regard to shade screw holes.
2. Connect positive supply wire (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead with appropriately sized twist on connector.
3. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead.
4. Please refer to the grounding instructions to complete all electrical connections.
5. Tuck the connected wires into the junction box.
6. Align screws from fixture to the holes in universal crossbar.
7. Screw fire plate onto universal crossbar.
8. Connect canopy to fireplate using side screws, tightening the and canopy flush to the ceiling.

## GROUNDING INSTRUCTIONS

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (typically copper or green plastic coated) to the fixture mounting crossbar with the ground screw.

**Note:** On straps for screw support fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

## LED BULB REPLACEMENT

It's recommended to use a soft cloth or gloves when handling this fixture.

To insert glass globe, twist in a clock wise motion onto brass globe holder. Repeat steps for removal.  
Remove G8 bulb by gently pulling it off from socket.