


ETOILE

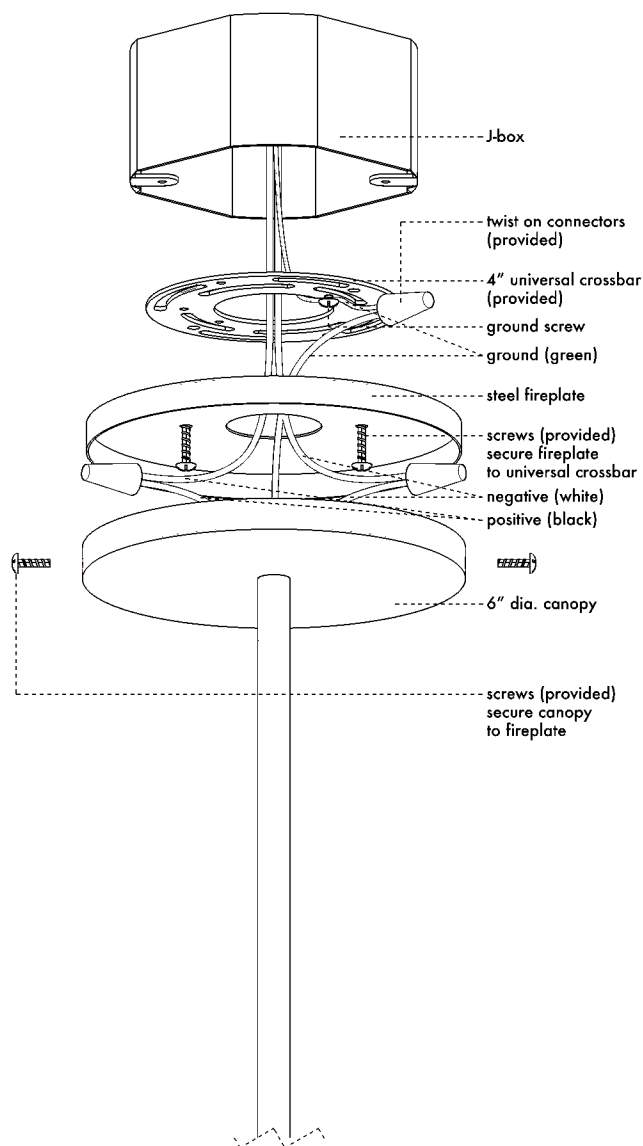

WIRING INSTRUCTIONS

Install metal pendant first, without glass shades.

1. Attach universal crossbar to Junction box, aligning holes to desired location in regard to fireplate screws. Screw fireplate.
2. Connect positive supply wire (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead with appropriately sized twist on connector.
3. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead.
4. Please refer to the grounding instructions to complete all electrical connections.
5. Tuck the connected wires into the junction box and raise the canopy and rod holding the pendant.
6. Align side screw holes from canopy to the fireplate. Thread the screws through, tightening the canopy flush to the ceiling.

GROUNDING INSTRUCTIONS

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (typically copper or green plastic coated) to the fixture mounting crossbar with the ground screw.

Note: On straps for screw support fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

LIGHT BULB REPLACEMENT

It's recommended to use a soft cloth or gloves when handling this fixture.

Gently twist the glass shade counter clockwise while holding the stem. Place the shade on a flat, non abrasive surface while changing the bulb.