

It's recommended to use a soft cloth or gloves when handling the fixture.

Wiring Instructions

1. Attach universal crossbar to J-box, aligning holes to desired location in regard to back plate screws.
2. Connect positive supply wire (typically black or the smooth, un-marked side of the two-conductor cord) to positive fixture lead with appropriately sized twist on connector.
3. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead.
4. Please refer to the grounding instructions to complete all electrical connections.
5. Tuck the connected wires into the J-box. Align screw holes from fire plate to the universal crossbar. Thread the screws through, tightening the back plate flush to the wall.
6. Align holes on glass shade with threaded rods and slide through. Place glass cap over threaded rods, tighten set screws to secure.


Grounding Instructions

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (typically copper or green plastic coated) to the fixture mounting crossbar with the ground screw.

Note: On straps for screw support fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

LED Replacement

Contact Atelier de Troupe for LED replacement.

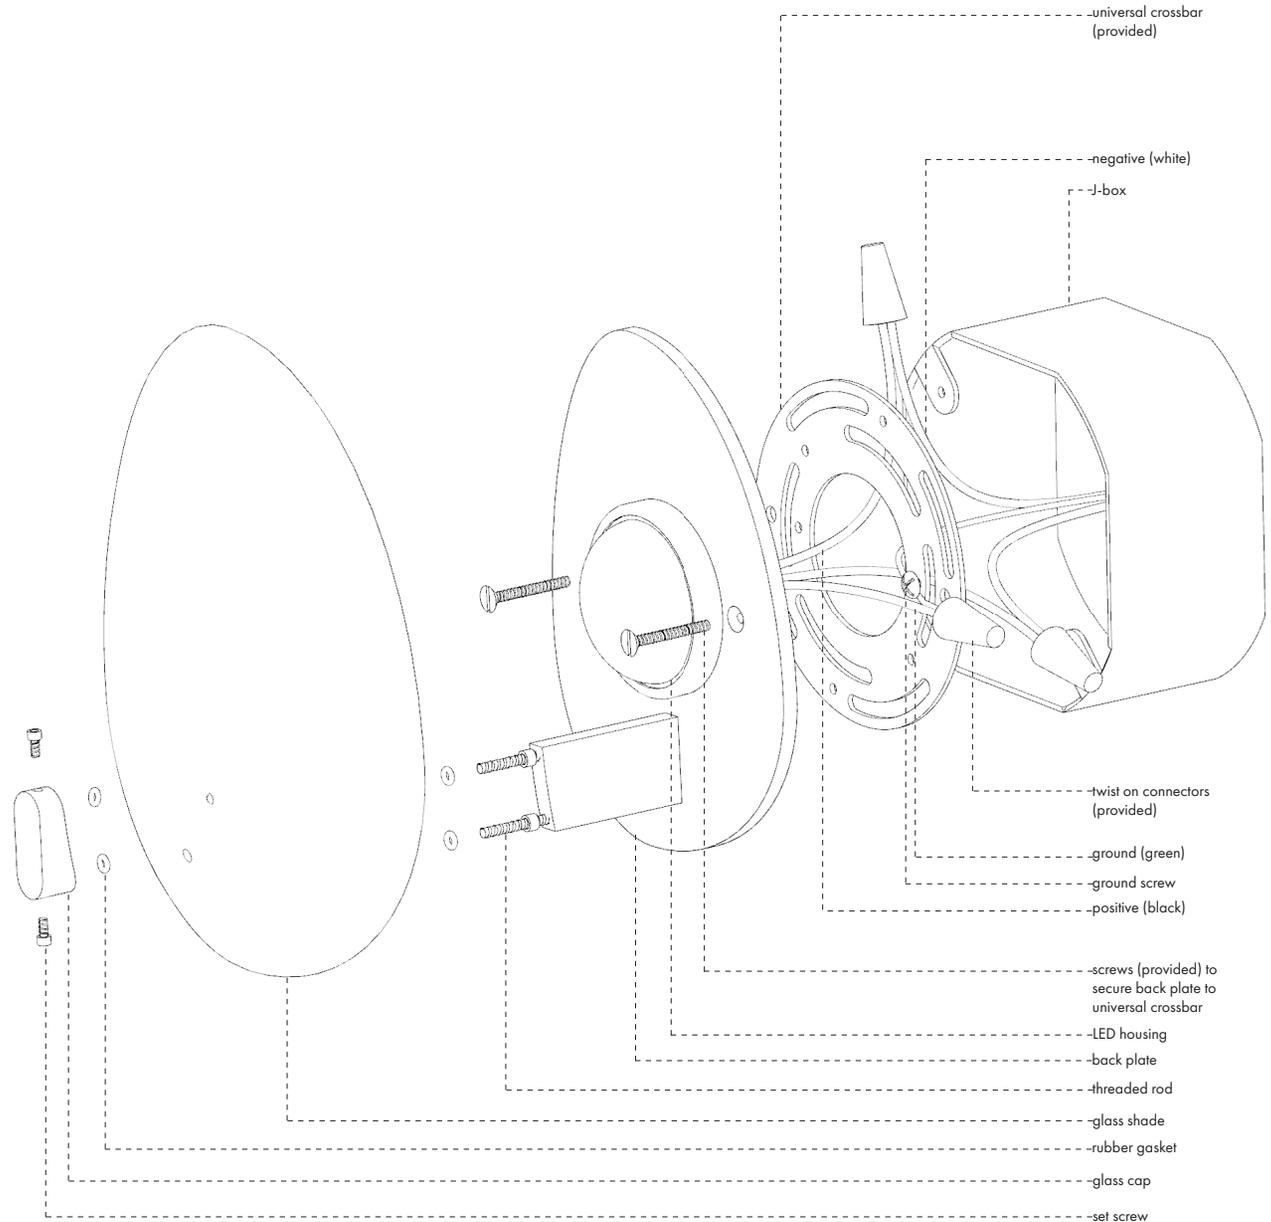

It's recommended to use a soft cloth or gloves when handling the fixture.

Wiring Instructions

1. Attach universal crossbar to J-box, aligning holes to desired location in regard to back plate screws.
2. Connect positive supply wire (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead with appropriately sized twist on connector.
3. Connect negative supply wire (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead.
4. Please refer to the grounding instructions to complete all electrical connections.
5. Tuck the connected wires into the J-box. Align screw holes from fire plate to the universal crossbar. Thread the screws through, tightening the back plate flush to the wall.
6. Align holes on glass shade with threaded rods and slide through. Place glass cap over threaded rods, tighten set screws to secure.

Grounding Instructions

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (typically copper or green plastic coated) to the fixture mounting crossbar with the ground screw.

Note: On straps for screw support fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

LED Replacement

Contact Atelier de Troupe for LED replacement.

